

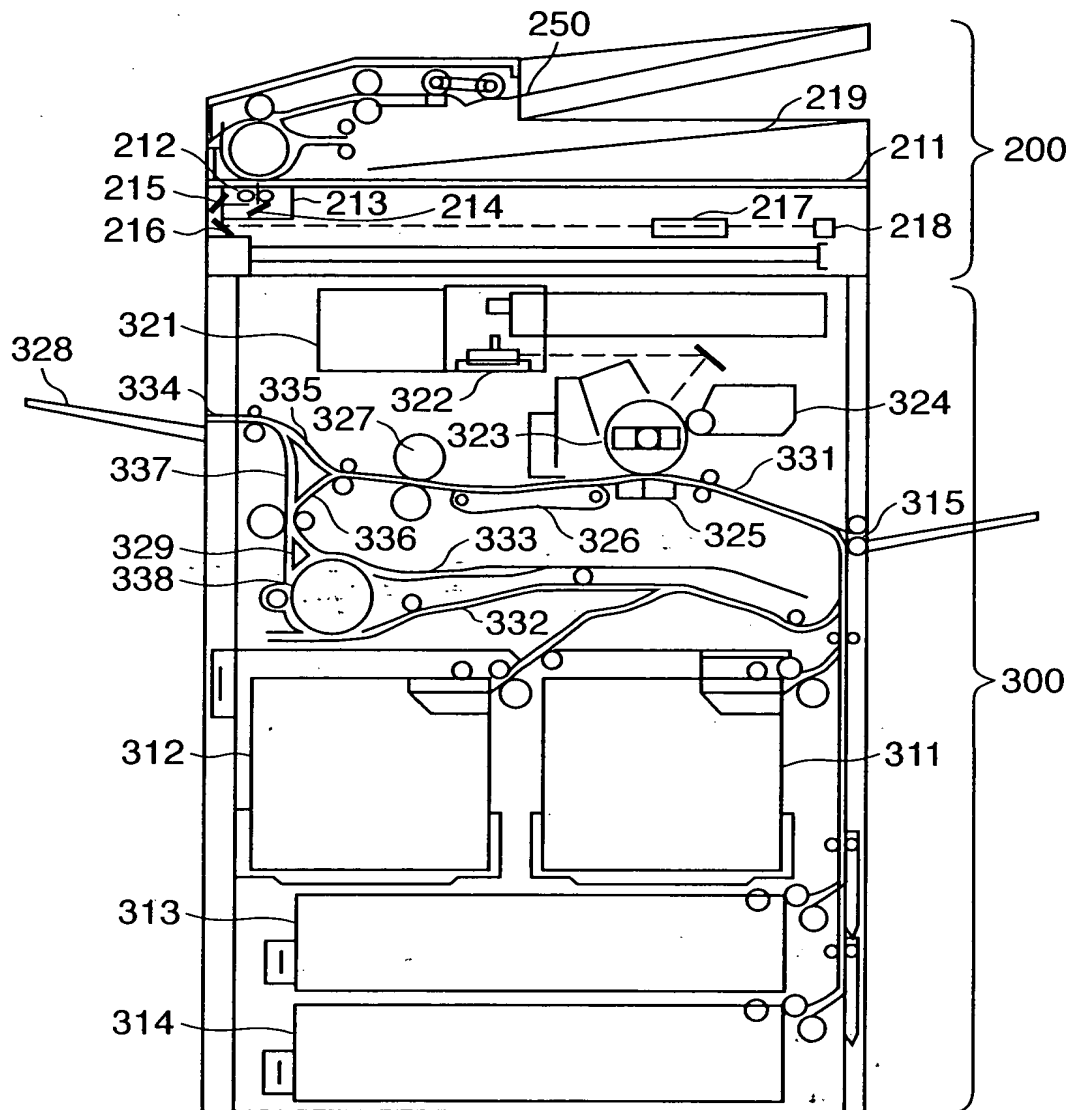 
FIG. 2

FIG. 3

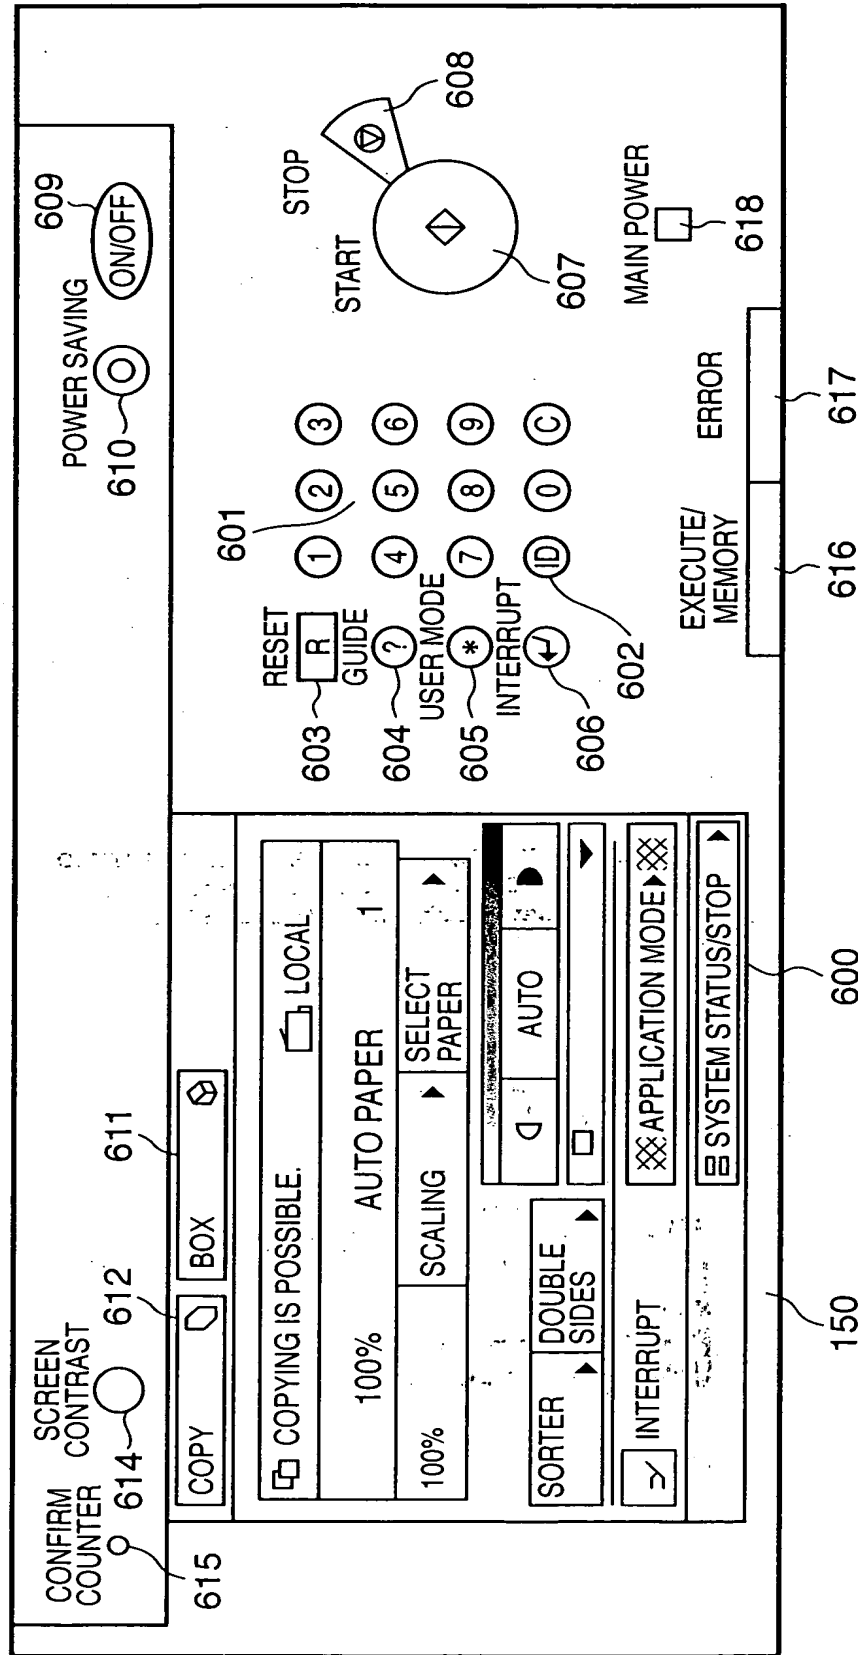 


FIG. 4

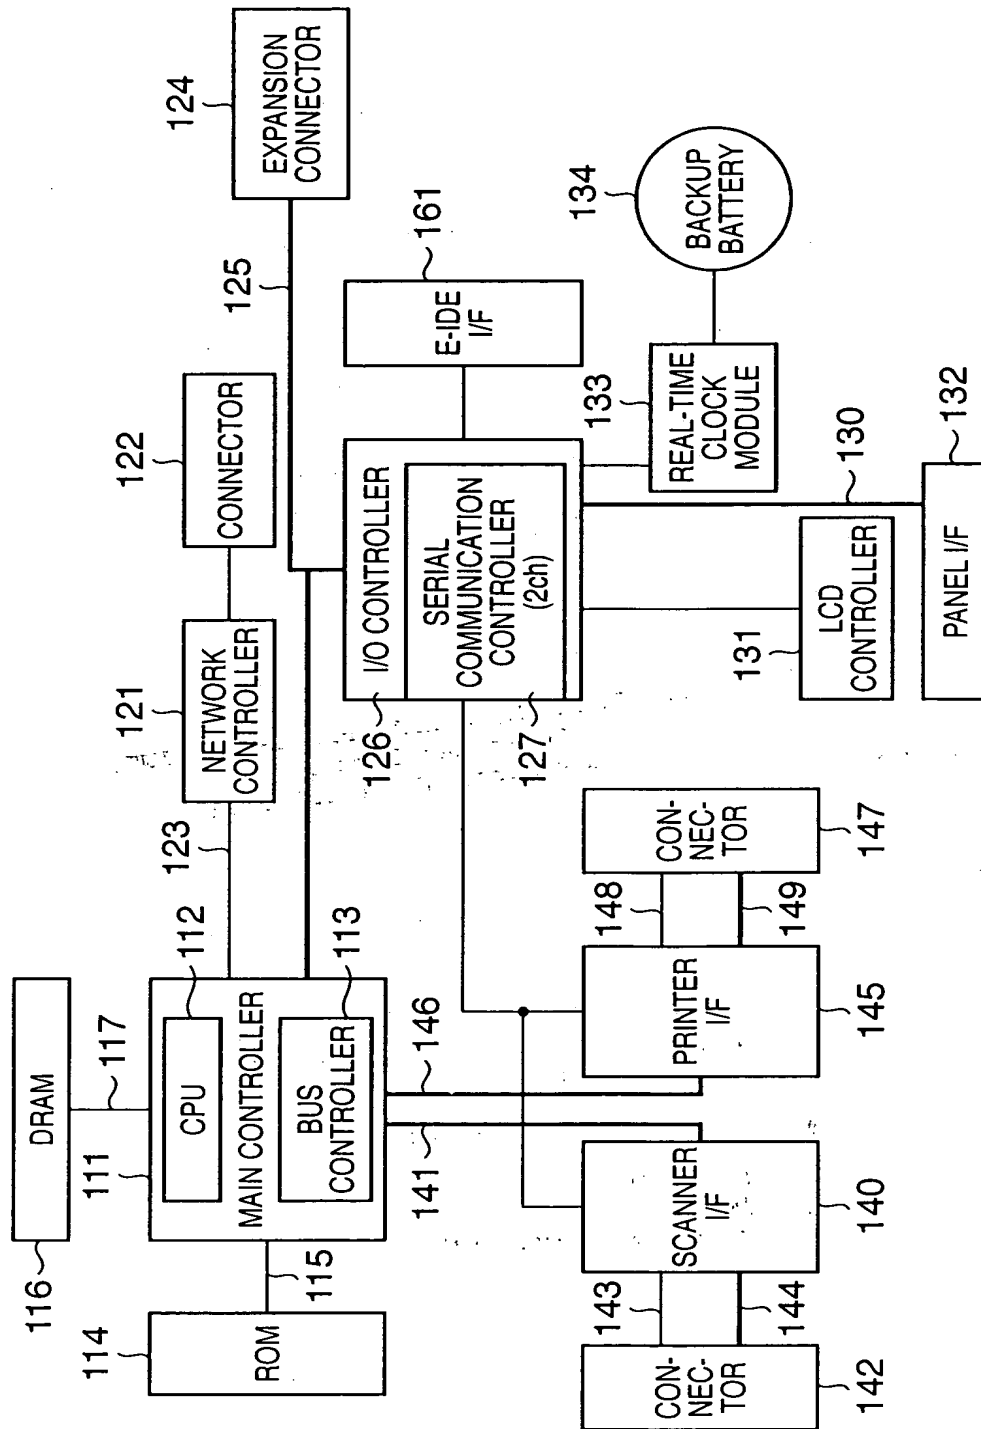 


FIG. 5

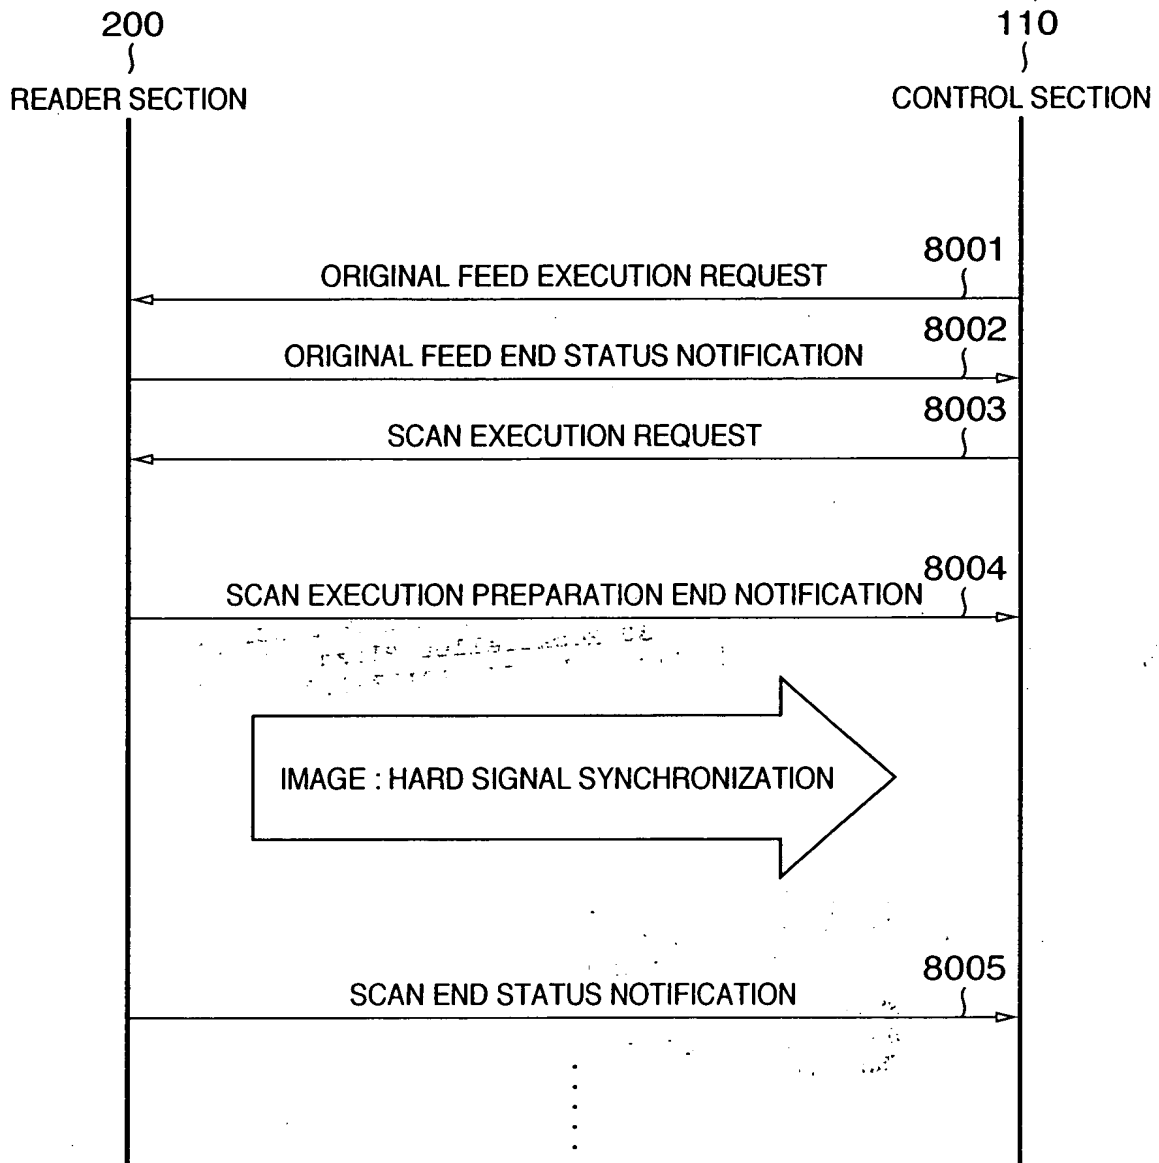 


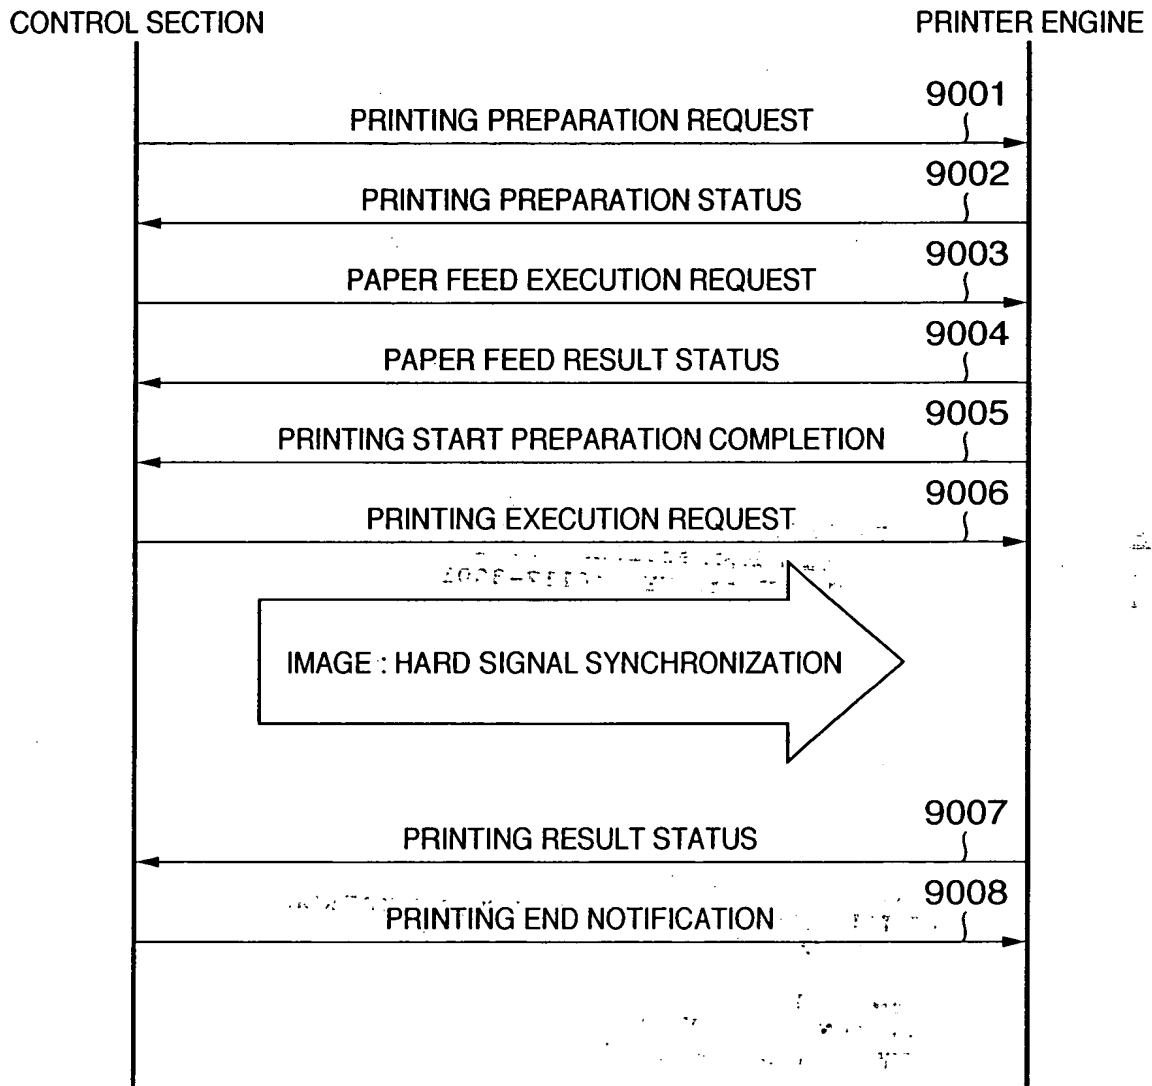 
FIG. 6

FIG. 7

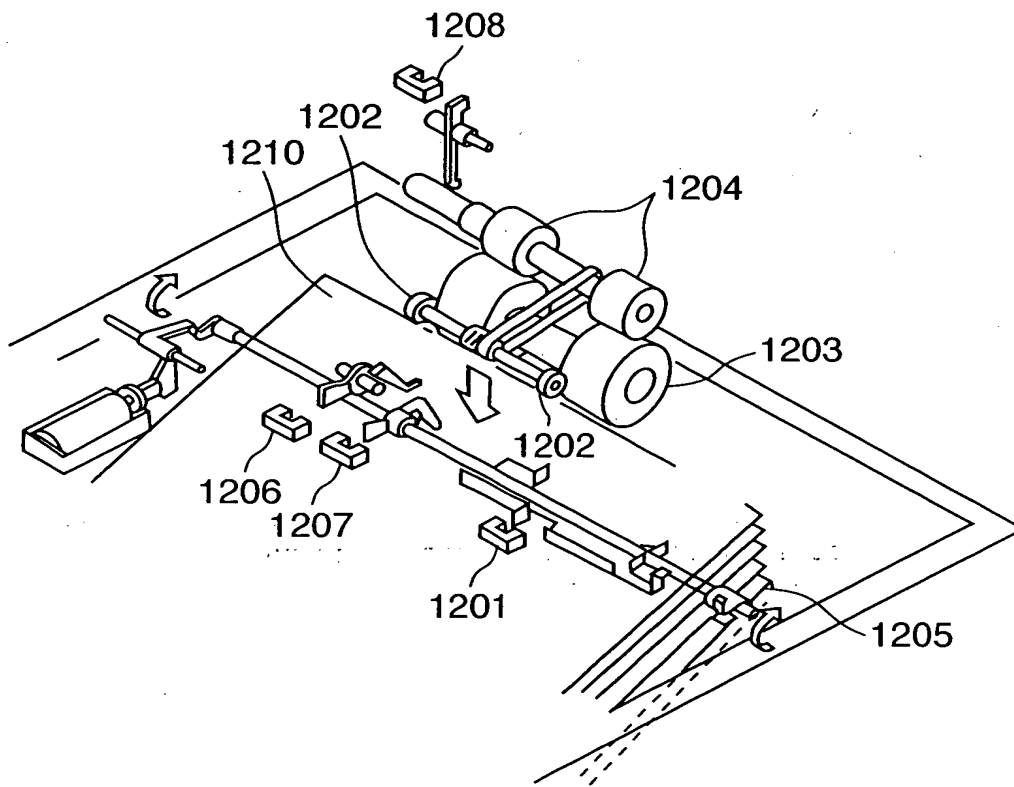 


FIG. 8

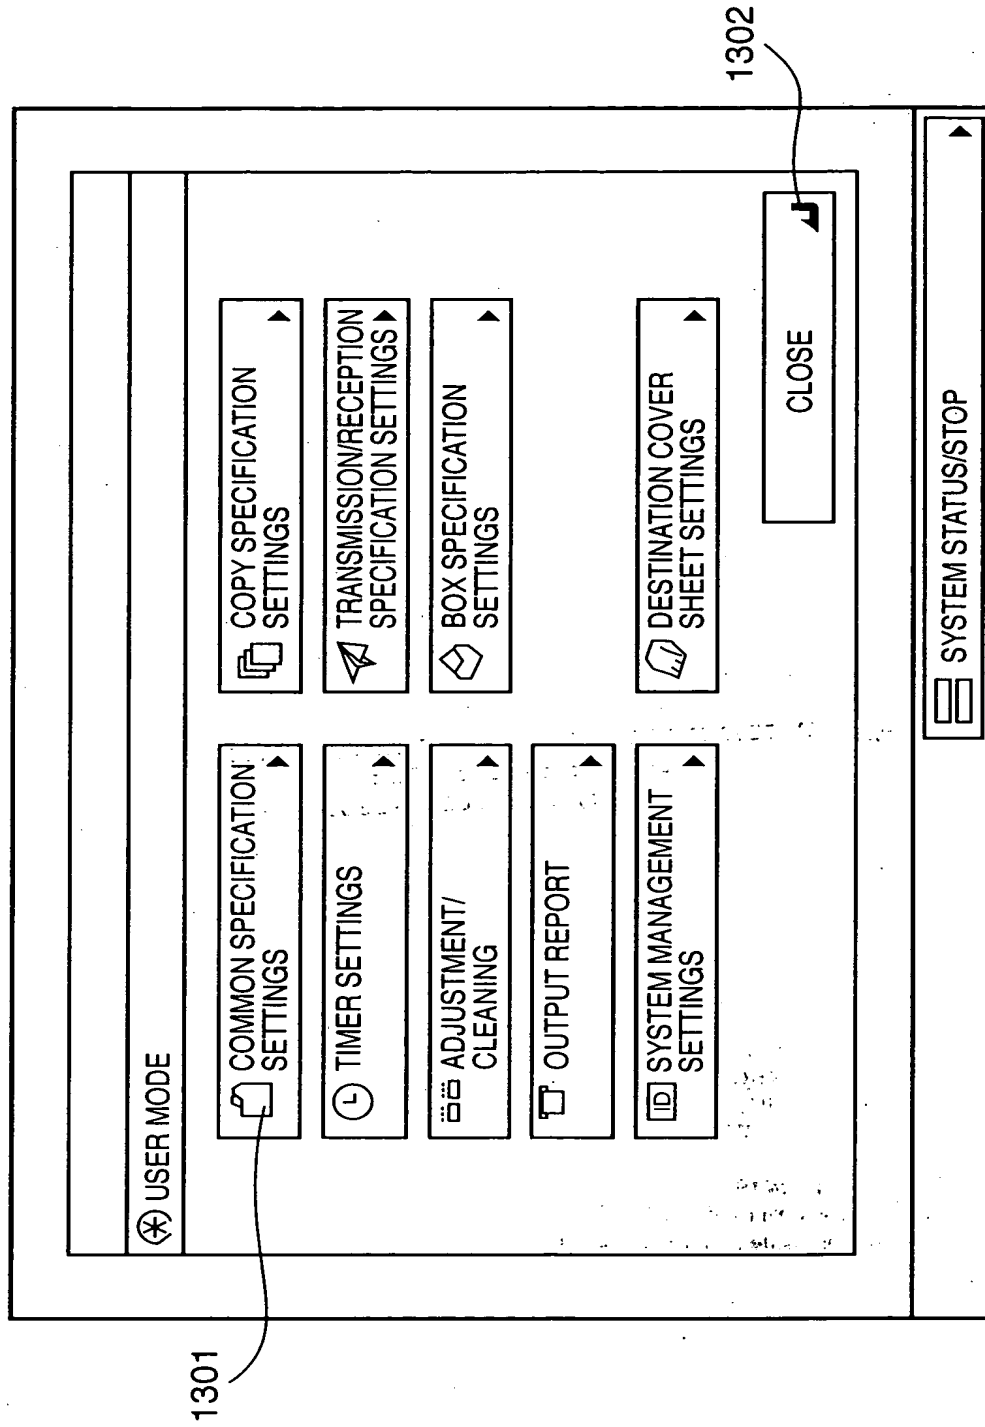 


FIG. 9

⊕ COMMON SPECIFICATION SETTINGS

■ SET INITIAL FUNCTION
▷ COPY

■ FUNCTION AFTER AUTO CLEAR
▷ RESTORE

■ BUZZER ON/OFF

■ INPUT INCH
▷ OFF

■ AUTO CASSETTE CHANGE ON/OFF

1401 ▾

1/4

△

1402

CLOSE

1403

SYSTEM STATUS/STOP

▷

FIG. 10

10/19

⚙ COMMON SPECIFICATION SETTINGS

■ REGISTER PAPER TYPE

■ CHANGE POWER SAVING MODE
▷ -10%

■ POWER CONSUMPTION DURING SLEEP
▷ LOW

■ SET DEDICATED TRAY

1501 2/4 1502

CLOSE 1503

SYSTEM STATUS/STOP 1504

FIG. 11

The image shows a graphical user interface with a menu structure. At the top, there is a header bar with the text "COMMON SPECIFICATION SETTINGS" and a right-pointing arrow. Below this, a sub-menu is open, showing "⊗ AUTO CASSETTE CHANGE ON/OFF". The main area of the screen contains five vertically stacked rectangular buttons, each with a label and a right-pointing arrow. These are labeled 1601 (COPY), 1602 (PRINTER), 1603 (BOX), 1604 (RECEPTION), and 1605 (ANOTHER). To the right of these buttons is a "CLOSE" button with a right-pointing arrow. At the bottom of the screen, there is a status bar with a left-pointing arrow, a "SYSTEM STATUS/STOP" button, and a right-pointing arrow. A label "1606" with a line pointing to the "CLOSE" button is located on the right side of the image.

⊗ COMMON SPECIFICATION SETTINGS

⊗ AUTO CASSETTE CHANGE ON/OFF

1601 COPY

1602 PRINTER

1603 BOX

1604 RECEPTION

1605 ANOTHER

CLOSE

1606

SYSTEM STATUS/STOP

FIG. 13

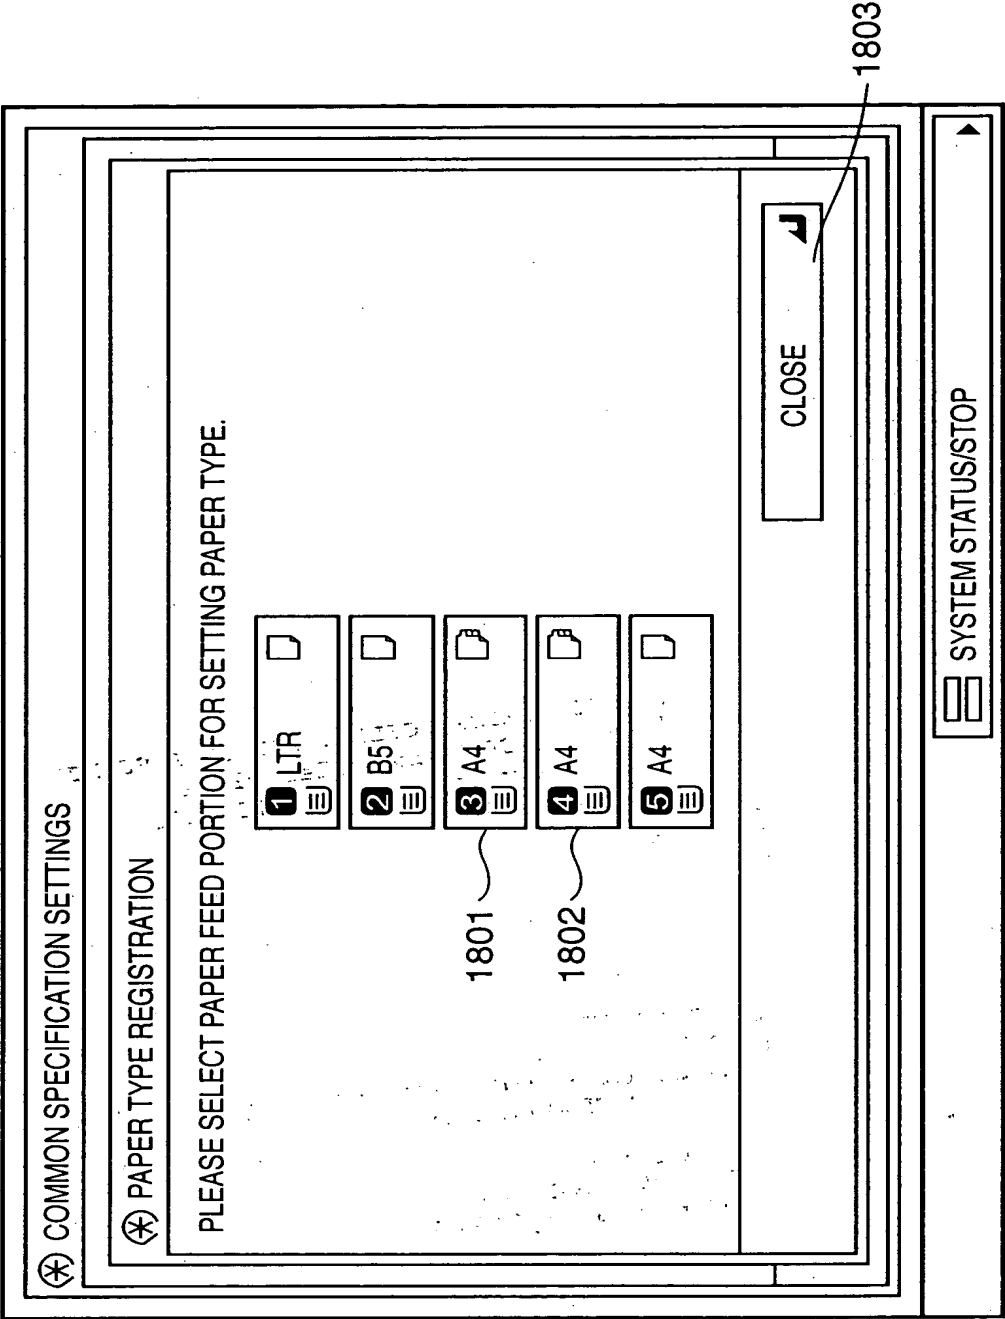 


FIG. 15

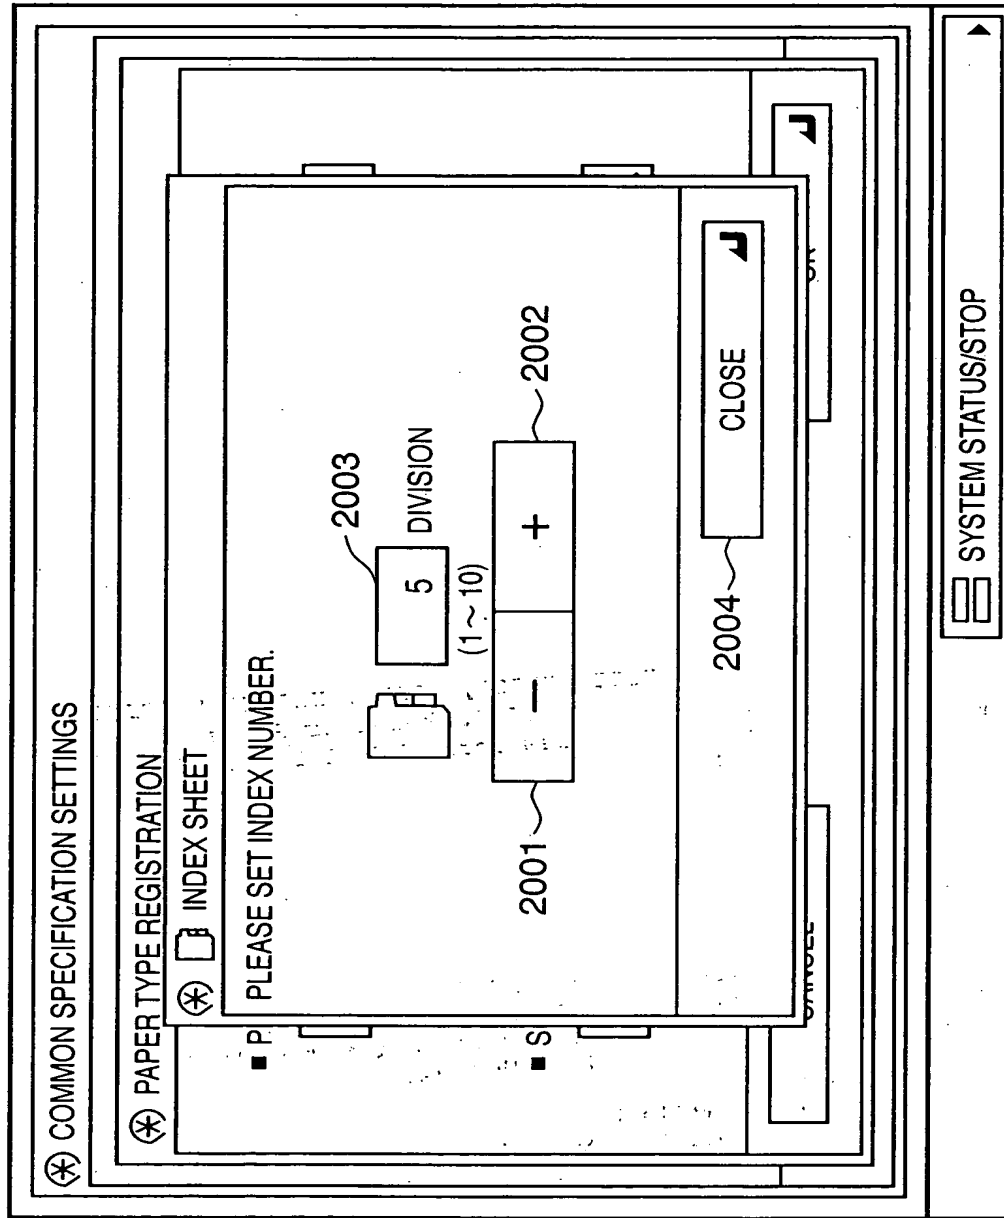 


FIG. 1

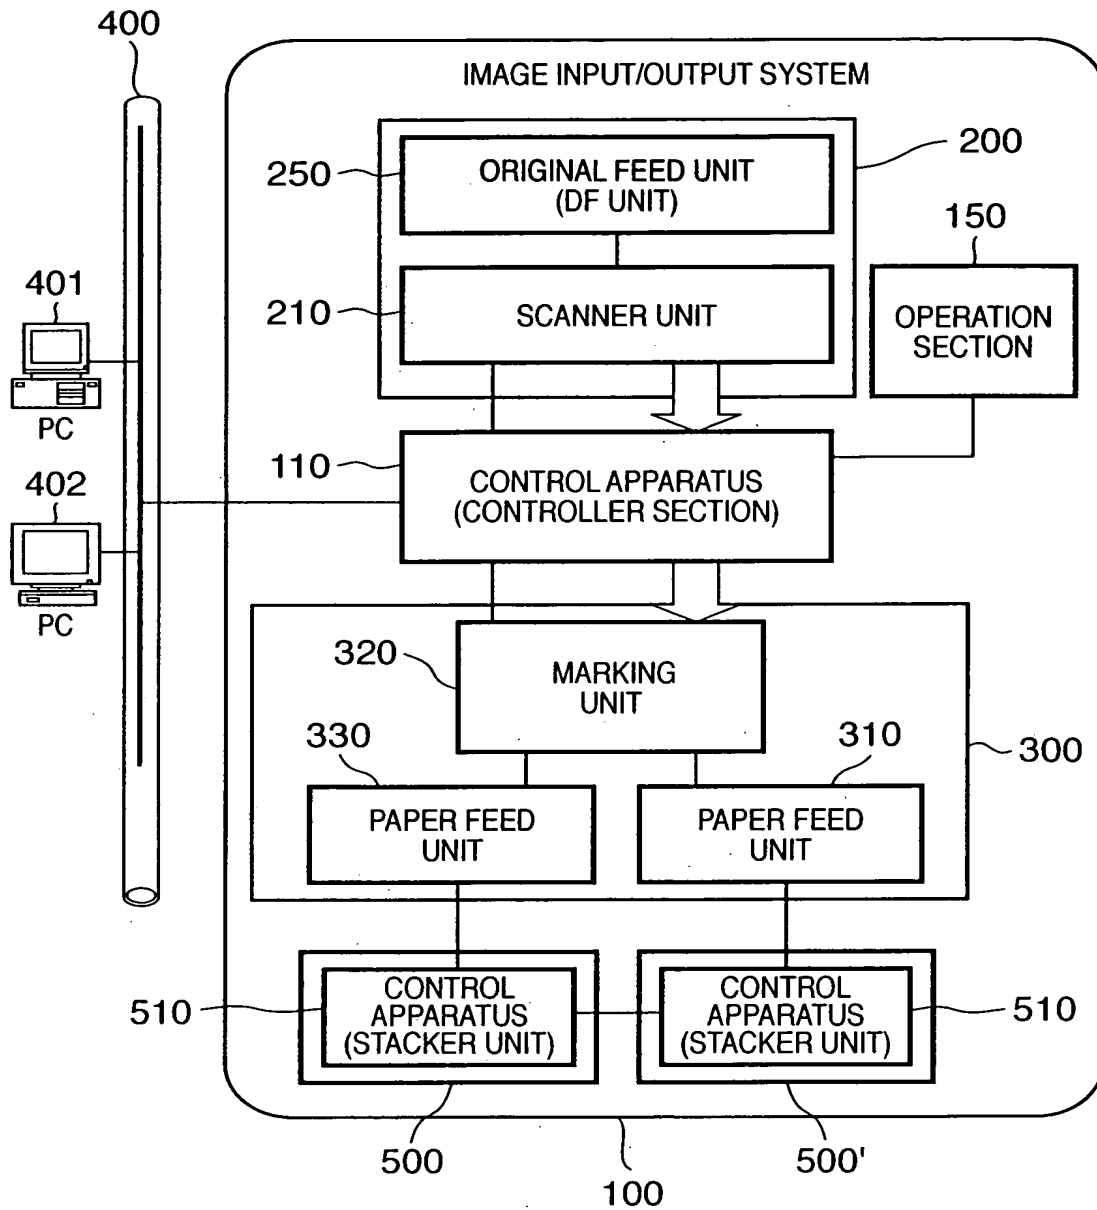 


FIG. 16A

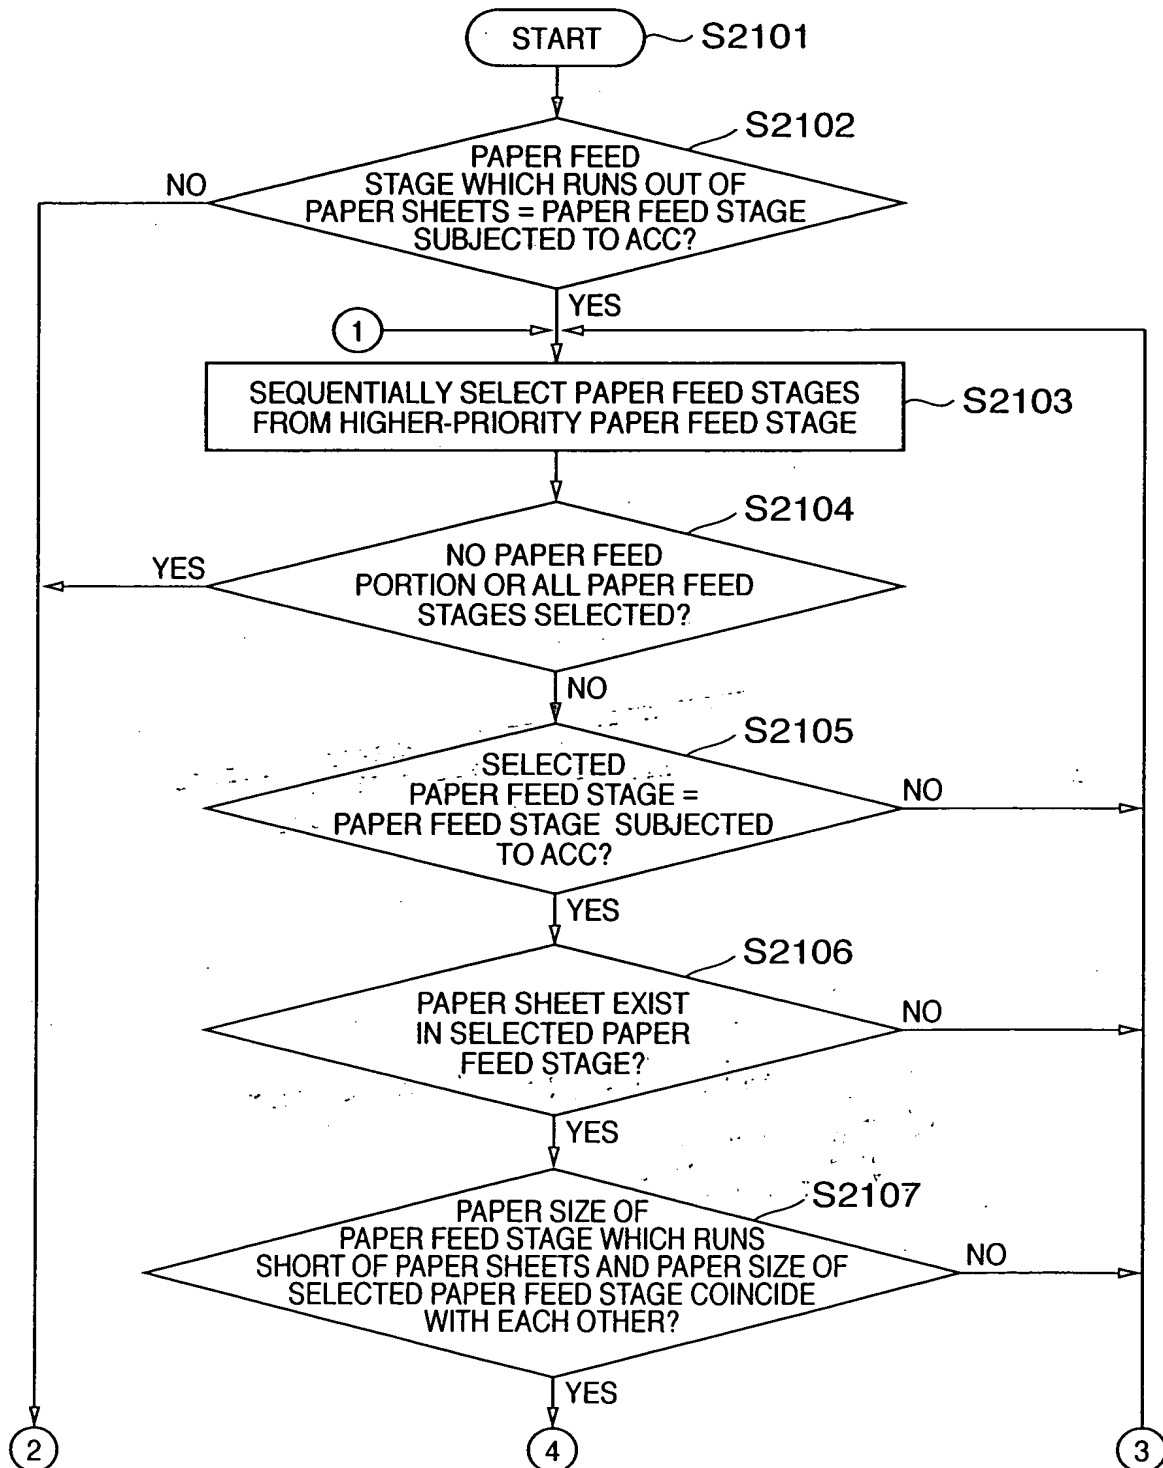 


FIG. 16B

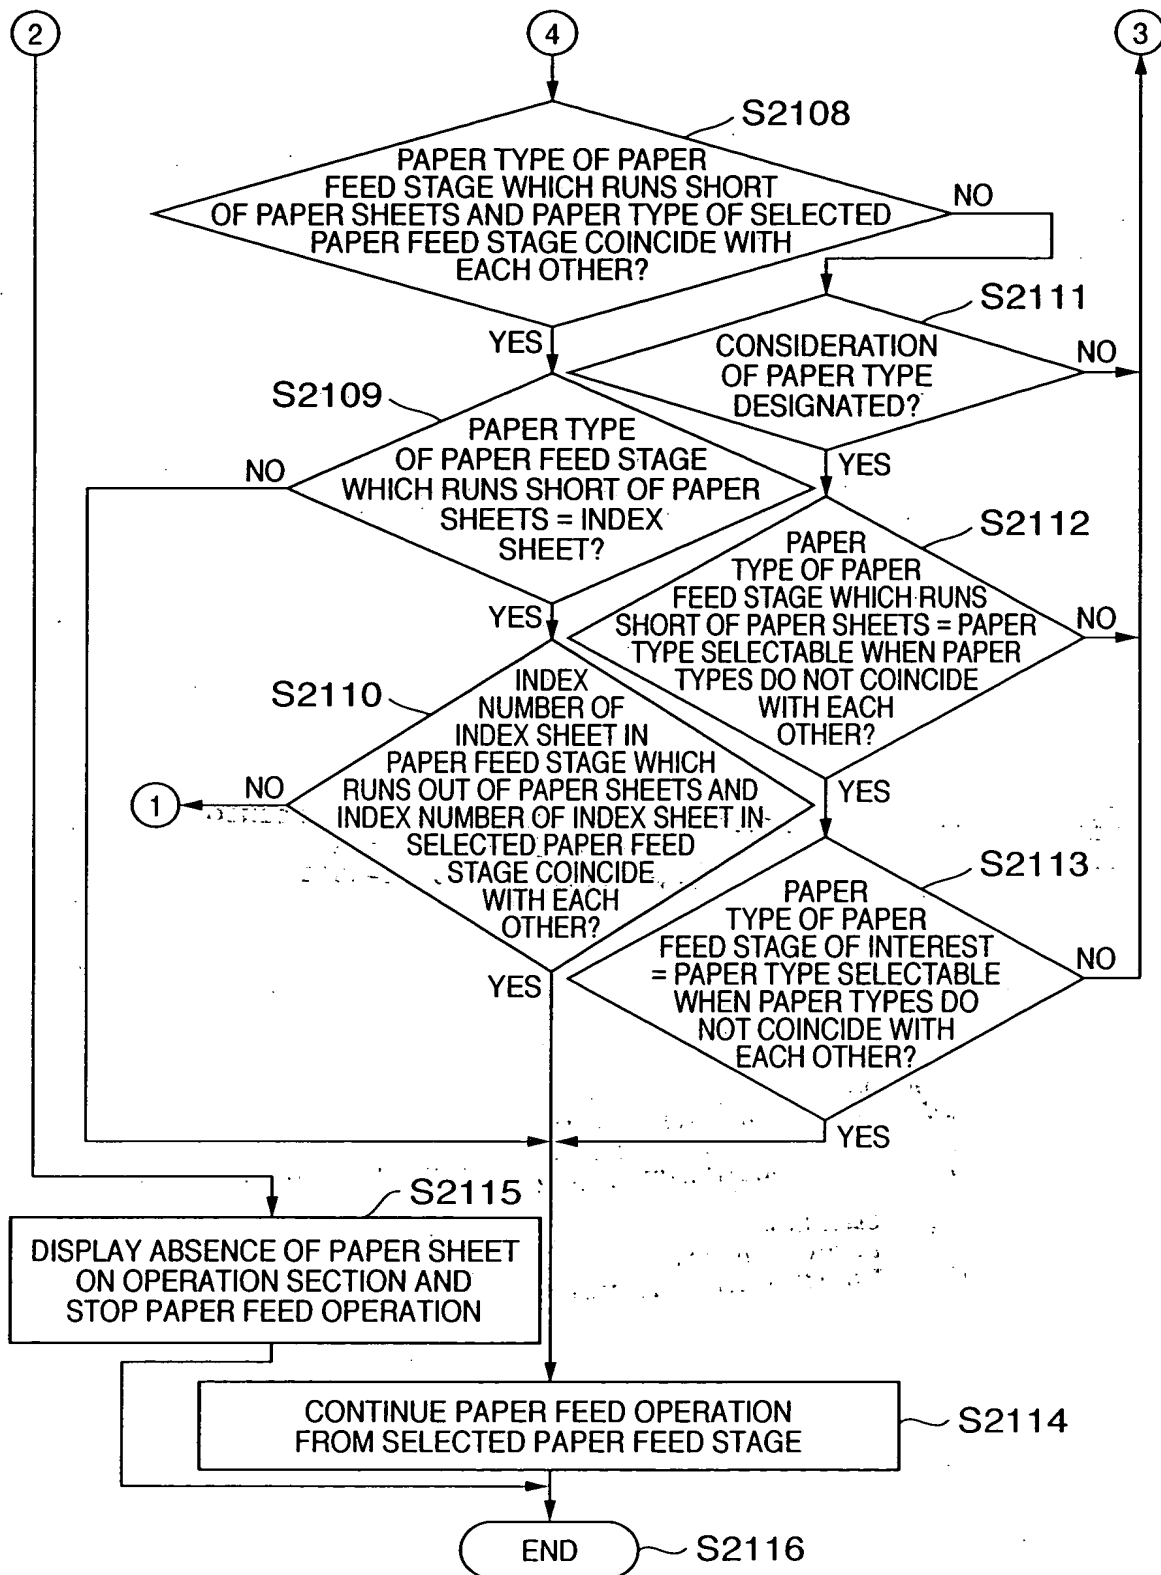 


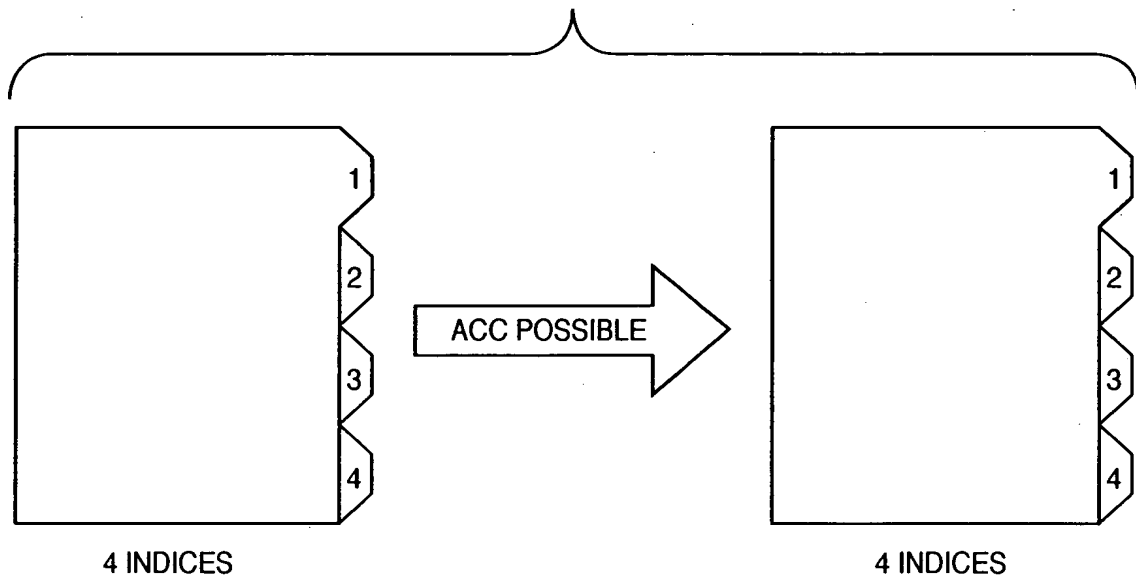 
FIG. 18

FIG. 17